


Shoe Repair Kit Instructions

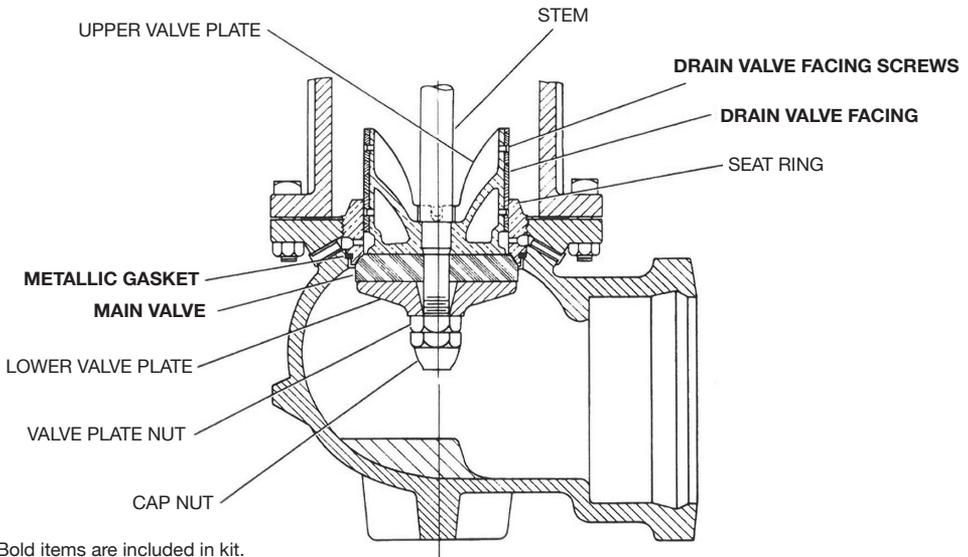

Bold items are included in kit.

1. With Main Valve Assembly removed from hydrant, remove Cap Nut and Valve Plate Nut.
2. Remove Lower Valve Plate and Main Valve.
3. Remove Seat Ring.
4. On Upper Valve Plate, replace Drain Valve Facings (2) using new Drain Valve Facing Screws (4).
5. Using a small flat blade Screwdriver, carefully pry the metallic Gasket from the Seat Ring. Be careful not to damage the threads or seating surface on the Seat Ring.
6. Install Metallic Gasket on bottom of Seat Ring: place gasket in one side of groove in Seat Ring with seam of gasket facing outward. Working in both directions with the thumbs, push the gasket outward and toward the Seat Ring until gasket is snugly seated in groove.
7. Slide the Seat Ring onto the Upper Valve Plate. Be sure the two wings on the Upper Valve Plate engage the slots on the Seat Ring. (See illustration for proper orientation of Seat Ring.)
8. Install new Main Valve and reinstall Lower Valve Plate.
9. Reinstall Valve Plate Nut and Cap Screw and tighten firmly.
10. Lubricate threads on Seat Ring and reinstall the Main Valve assembly.

Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellercompany.com.

© 2016 Mueller Co., LLC. All rights reserved.

Form 11091 08/16