



Reliable Connections™

## Nut Replacement Instructions

The Hold Down Nut Kit contains:

**Hold Down Nut Kit and Component List**

OL Part No.	OR Part No.	Description	Qty
287847	287848	Hold Down Nut Repair Kit	n/a
241246	241247	Hold Down Nut	1
241248	241248	Thrust Washer	1
195271	195271	O-Ring	1
190702	190702	Hold Down Nut Screw	1
Form 12947	Form 12947	Instructions	1

Beginning with July 2014, all A-415 hydrants began using a thrust washer.

### Hydrants Built Prior to July 2014

These hydrants do not feature a thrust washer. To replace the Hold Down Nut:

1. Remove the existing Hold Down Nut and discard.
2. Place the Thrust Washer on the Op Nut above the collar.
3. Install the new Hold Down Nut.

**Caution:** DO NOT use the old Hold Down Nut with the new Thrust Washer

**Caution:** DO NOT use the new Hold Down Nut without the new Thrust washer.

### Hydrants Built in July 2014 and After

These hydrants do feature a thrust washer. To replace the Hold Down Nut:

1. Remove the existing Hold Down Nut.
2. Remove the existing Thrust Washer.
3. Install the new Thrust Washer.
4. Install the new Hold Down Nut.

### Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit [www.muellercompany.com](http://www.muellercompany.com).

© 2016 Mueller Co., LLC. All rights reserved.

Form 12947 07/16