

**GATE VALVE ORDERING
INSTRUCTIONS**



UL / FM

FIRE PROTECTION PRODUCTS

When ordering Mueller® Gate Valves, specify the following:

1. Quantity If more than one size, quantity of each
2. Size of valve Shown on Page B-1-5 through B-1-15
3. Catalog number Shown on Pages B-1-5 through B-1-15
4. Direction of opening Usually left (counter-clockwise).

Where previous valves open right (clockwise, new valves should open in same direction (Wrench nuts on valves that open to the right are painted red for identification.

5. Method operation 2" square wrench nut or handwheel is available.

When ordering parts for Mueller Gate Valves, Specify the following:

1. Quantity
2. Size of Valve
3. Part Name and Number - when ordering valve body, specify type of ends desired
4. Valve catalog number
5. Direction of opening
6. Year date of valve