

A-20806/A-80607 Adjustable Indicator Post

To order specify:

Quantity, catalog number including lower barrel designation (A, B, C, D, or E), valve size, direction of opening, and size and shape of operating nut (1-1/4" square is standard and will be furnished unless otherwise specified).

A-20808/A-80809 Non-Adjustable Indicator Post

To order specify:

Quantity, catalog number including lower barrel designation (0, 1 or 2), valve size, direction of opening, and size and shape of operating nut (1-1/4" square is standard and will be furnished unless otherwise specified).

A-20814 Wall Type Indicator Post

To order specify:

Quantity, catalog number, valve size, and direction of opening. Handwheel is standard on Wall Type Indicator Posts.

Replacement Parts

To order specify:

Quantity, catalog number, part number, part name, catalog number of post, year date on post and size or lower barrel designation of post.