

### Copper flare connection optional equipment

#### Copper flare nut



CATALOG NUMBER: **H-15430**

1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
------	------	----	--------	--------	----

#### Solid copper disc



Used with regular copper flare nut to shut off line.

CATALOG NUMBER: **H-15535**

1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
------	------	----	--------	--------	----

#### Brass cap



Fits on copper flare spud to cap off line.

CATALOG NUMBER: **H-15540**

3/4"	1"
------	----

#### Flaring tool



Used to make 45° flare on type "K" copper tubing.

CATALOG NUMBER: **H-18000**

1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
------	------	----	--------	--------	----

#### Drilled flaring tool

 


Used to make 45° flare on type "K" copper tubing without shutting off water--drilled to exhaust water at right angle to tubing.

CATALOG NUMBER: **H-18005**

3/4"	1"
------	----

#### Reamer

 


Used to ream the inside of type "K" copper tubing to remove burrs prior to flaring.

CATALOG NUMBER: **H-18010**

3/4"
------

#### Brass Hammer



Solid brass head with 10" wooden handle. Weight 2-3/4 lb.

CATALOG NUMBER: **H-18025**

**Note: When using any striking tool, safety eye protection must be worn. Inspect hammer and tools for any damage after each use and repair or replace if mushrooming or chipping is evident.**