

Wrenches for 4-1/2" and 5-1/4" Tamper-Proof Hydrants



A-391

Operating Nut Wrench

Used to assemble and disassemble the Tamper-Proof Hold-Down Nut.



A-384

Spanner Wrench

Used to assemble and disassemble the Tamper-Proof Operating Nut Cap.



A-374

Operating Wrench

Operates the Tamper-Proof Hydrant and removes Hose and Pumper Nozzle Caps. (Also operates hydrants without tamper-proof feature).