 


Rev. 8-04 Shaded area indicates changes



A-314

A-314 Operating wrench --- operates nozzle caps, pin and lug type hose couplings, hydrant operating nut, and hold down nut.



A-346

A-346 Seat wrench --- Adjustable, used to remove main valve and seat ring from ground line level. For use with A-415 hydrant.



A-316

A-316 Nozzle wrench --- Used to remove and install threaded in hose and pumper nozzles.

Sizes: 2-1/2", 3", 3-1/2", 4", 4-1/2", and 5"



A-317

A-317 Nozzle lock installation tool --- used to install nozzle locking device.