INSTRUCTIONS

SPOOL TYPE BY-PASS **VALVE REPAIR KIT**

PART NO. 682078 - For Mueller® B-101™ and

B-100™ Machines

☐ PART NO. 682079 - For H-10917 Slide Gate Valve and H-17025 Control

Chamber

REPAIR KIT PARTS LIST

- 1 Spool and O-ring Assembly
- 1 Retaining Ring (306991)
- 3 O-rings (078818)
- 1 Instruction Sheet (Form 12087)

REMOVING EXISTING VALVE SPOOL

- 1. Remove retaining ring from end of spool (retain the ring for reuse).
- 2. Pull spool out of by-pass valve body. (Note orientation of knurled knob for reassembly.)
- 3. Thoroughly clean body bore and examine for scratches. (If deep scratches are evident, the by-pass valve body must also be replaced.)

INSTALL REPAIR VALVE SPOOL

- 1. Remove spool and O-ring assembly from plastic tube and retain tube for reuse. Lubricate O-rings with silicone based grease.
- 2. Insert spool and O-ring assembly into by-pass valve body with knurled knob on the same side of body as old spool.
- 3. Check spool for free movement.
- 4. Install new retaining ring into groove on end of
- 5. Remove O-rings from used spool and thoroughly clean spool.
- 6. Install three O-rings provided in kit into three 1/8" wide O-ring grooves of used spool.
- 7. Install used retaining ring onto used spool and store this assembly as a spare in plastic sleeve.

MAINTENANCE

Periodically, remove and clean the sliding part of the bypass valve:

- Remove retaining ring from end of valve spool.
- 2. Pull spool out of valve body.
- 3. Clean spool and O-rings, removing old lubricant and any foreign material.
- 4. Similarly clean body bore and examine for scratches (If deep scratches are evident, the by-pass valve must be replaced).
- 5. Examine O-rings for damage and replace if necessary.
- Lubricate O-rings with a silicone based grease.
- 7. Reassemble the spool and secure with retaining ring.

NOTE: It is recommended that a by-pass repair kit be kept available for quick installation.



Main Office - Decatur, Illinois 62525 1-800-423-1323 Canada - Milton, Ontario 1-905-878-0541