


Assembly Instructions

NOTE: Ball valve with cap option is shipped with cap assembled as show, and cotter pin held temporarily in place by plastic retainer.

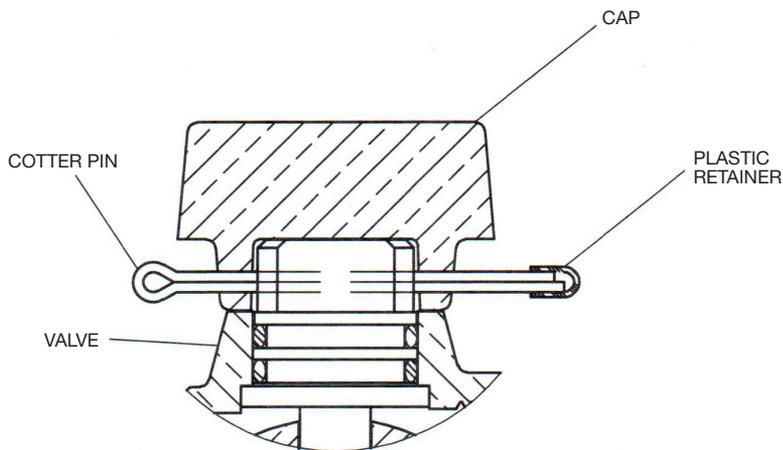

1. To install valve, remove cotter pin and cap from valve.
2. Machine insert ball valve using instructions in machine operating manual, and properly tighten valve into water line.
3. Reassemble cap to valve and permanently attach by inserting cotter pin and spreading its ends. (Discard plastic retainer.)

Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellercompany.com.

© 2016 Mueller Co., LLC. All rights reserved.
Form 12265 08/16