

OS&Y Resilient Wedge Gate Valves

Installation Instructions: 18"-24" Series R-2361 Handwheel

- Remove Cap Nut temporarily installed on Bush Nut. Ensure Thrust Washer remains on top of Yoke.
- Place Handwheel on top of Yoke, aligning Handwheel hex with Bush Nut hex. Lettering on Handwheel should be facing upward.
- Rotate Handwheel in closing direction until resistance is felt. Bush Nut shoulder should be flush with Thrust Washer or higher.
- Replace Cap Nut on Bush Nut, and tighten until Cap Nut is seated firmly on Handwheel.

Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellercompany.com.

© 2016 Mueller Co., LLC, All rights reserved.

Form 12694 03/16