

H-306 FABRICATED STEEL TAPPING SLEEVE

Installation Instructions

CAUTION

- Use proper size (OD range) sleeve for pipe OD.
- Check for rocks or debris around/under gasket.
- Make sure threads on studs and nuts are clean.
- Make sure nuts are assembled to correct torque.
- Do not allow tapping sleeve to support cantilever load of tapping valve and/or tapping machine.
- Use blocks to support pipe, valve and machine to avoid placing undue stress on sleeve.

Note: Tapping sleeves are designed for sealing purposes only, not to serve as structural support or restraint.

WARNING: Never use air or other compressible gas to pressure test installation, which could cause the pipe or product to burst with sufficient force to cause property damage or serious injury to personnel. Use only hydrostatic pressure testing performed in accordance with accepted industry practice.

ALWAYS PRESSURE TEST FOR LEAKS BEFORE MAKING TAP

1. Visually inspect sleeve prior to installation to ensure no damage has occurred during shipment or storage, and that all components are present.
2. Measure outside diameter of pipe and compare it with OD range of sleeve to verify that correct size of tapping sleeve is being installed.
3. Thoroughly clean pipe surface where sleeve will be installed so it is free of dirt, corrosion or other debris that could impair gasket seal.
4. Lubricate pipe surface and sleeve gasket with soap solution (add glycerin in freezing weather).
5. Place top half on pipe in position required for permanent installation. Make sure test plug is accessible. Do not rotate tapping sleeve top half after it is placed on pipe.

6. Install bottom half of tapping sleeve. Do not rotate tapping sleeve.
7. Insert bolts and nuts with washer and hand tighten, maintaining equal gaps between sleeve halves on both sides.
8. Wrench-tighten bolts starting at the center, alternating side to side and working outward to each end – to equalize gaps on both sides. Continue tightening bolts until sleeve halves conform to contour of pipe, and all bolts are uniformly tightened within the following torque range:

PIPE DIAMETER	TORQUE RANGE
4" - 12"	90 - 100 ft-lbs.
14" - 16"	100 - 110 ft-lbs.

IMPORTANT NOTE: AFTER 10 MINUTES, RE-TORQUE TO ABOVE VALUES BEFORE LEAKAGE TEST

9. Test installation for leakage before making tap. (4" - 12" rated 300 psig working pressure; 14" - 16" 250 psig working pressure).

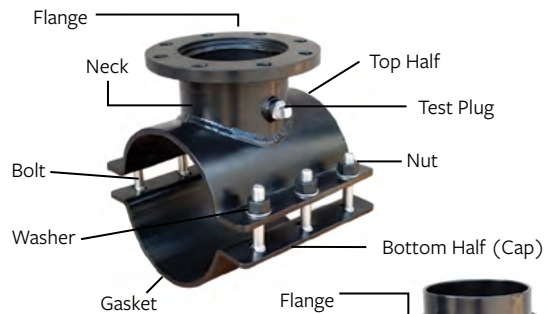


FIG. 1 FLANGE (CS) MODEL

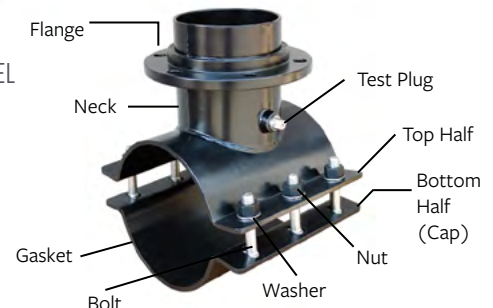


FIG. 2 MECHANICAL JOINT (MJ) MODEL

For more information about us or to view our full line of water products, please visit www.muellerwp.com or call Mueller customer service at: 1.800.423.1323

Mueller refers to one or more of Mueller Water Products, Inc. a Delaware corporation ("MWP"), and its subsidiaries. MWP and each of its subsidiaries are legally separate and independent entities when providing products and services. MWP does not provide products or services to third parties. MWP and each of its subsidiaries are liable only for their own acts and omissions and not those of each other. MWP brands include Mueller[®], Echologics[®], Hydro Gate[®], Hydro-Guard[®], HYMAX[®], Jones[®], Krausz[®], Mi.Net[®], Milliken[®], Pratt[®], Pratt Industrial[®], Singer[®], and U.S. Pipe Valve & Hydrant. Please see muellerwp.com/brands and krauszusa.com to learn more.

© 2020 Mueller Co., LLC. All Rights Reserved. The trademarks, logos and service marks displayed in this document are the property of Mueller Co., LLC., its affiliates or other third parties. Products above marked with a section symbol (S) are subject to patents or patent applications. For details, visit www.mwppat.com. These products are intended for use in potable water applications. Please contact your Mueller Sales or Customer Service Representative concerning any other application(s).