

# Mueller® Post Indicator Replacement

## A20801 TO A20806 CONVERSION INSTRUCTIONS

### DETERMINING IF CONVERSION IS REQUIRED

You can replace an A20801 upper assembly with an A20806 IF the cotter pin connecting the post indicator stem coupling to the valve wrench nut was not installed. To determine if the A20801 stem was pinned to the valve wrench nut follow these instructions:

1. Dig down around the A20801 Post Indicator until the bottom of the Upper Barrel (no. 1) can be seen.
2. Loosen the 2 Hex Head Screws (no. 2) so that the Upper Barrel is free.
3. Separate the Upper Barrel from the Lower Barrel (no. 3) and set aside.

4. Once the Upper Barrel is removed, lift up on the Adjustable Stem. If the stem can be removed it is not connected to the Valve Wrench Nut. Remove stem and set aside.

### POST INDICATOR REPLACEMENT


If steps 1 – 4 above are successful, follow these steps to replace Post Indicator:

1. Determine the correct A20806 "Order Length". Consult Mueller Catalog Section E-1-2 for assistance.
2. Remove the Lower Barrel (no. 3) from the New A20806 Post Indicator.
3. Remove the telescoping Lower Stem (no. 4) from the New A20806 Post Indicator.
4. Lower the new A20806 Lower Stem into the existing A20801 Lower Barrel.
5. Align the Lower Stem Coupling and seat on the Valve Wrench Nut.

6. Place the A20806 Upper Barrel Assembly on the existing A20801 Lower Barrel.
  7. Tighten the 2 Hex Head Screws (no. 2).
- Adjust the targets (if necessary). Follow instruction in A20806 Operation Manual.

#### Parts List

ID	PART NAME
1	Upper Barrel
2	Hex Head Screw
3	Lower Barrel
4	Lower Stem

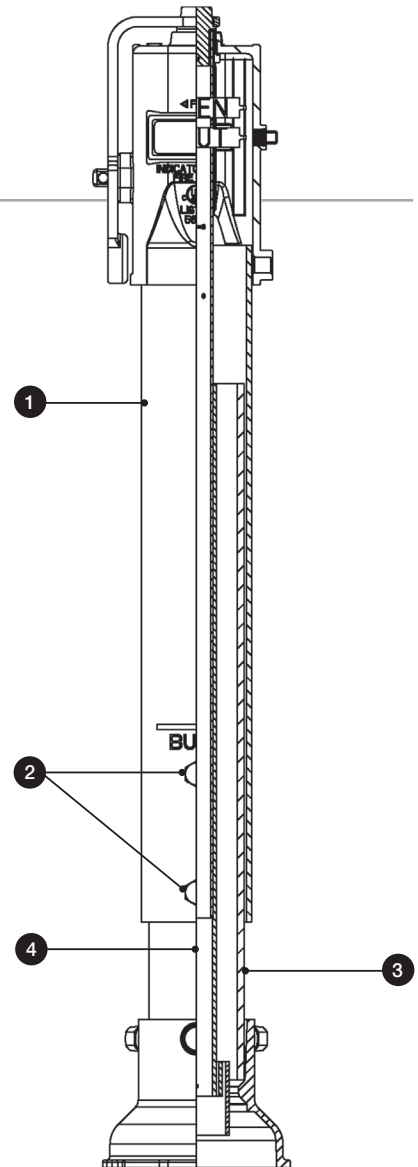

Water (U.S.)  
 1.800.423.1323  
[www.muellercompany.com](http://www.muellercompany.com)  
[moreinfo@muellercompany.com](mailto:moreinfo@muellercompany.com)

International  
 1.423.490.9555  
[www.mueller-international.com](http://www.mueller-international.com)  
[international@muellercompany.com](mailto:international@muellercompany.com)

Form 13945 – 05/18