

RESIDENTIAL SERVICE INSTALLATION • INSTRUCTIONS

DUAL CHECK VALVE

Instructions for Installation of Mueller® Angle Meter Dual Check Valve

Normally install in-line or angle Mueller Dual Check Valves on the outlet of a meter to prevent the backflow of possibly contaminated water into the potable water system. Mueller Dual Check Valves also prevent hot water back-up damage to meter parts and eliminate meter box flooding when making meter changes.

FIELD TESTING PROCEDURE

NOTE: The Mueller Dual Check Valve normally does not have to be removed from the line for testing. If valve is removed from the line for testing, each check can be tested in the valve by removing the other check (poppet & spring).

1. Disconnect inlet end of valve from line or meter.
2. Check the valve inlet for leakage for 1 minute. The first check is sealing if no leakage occurs and, after pushing the 1st poppet inward*, a small amount of water sprays out the end of the valve.

NOTE: If no water sprays out the inlet end after pushing the 1st poppet inward, the 2nd poppet was sealing instead of the 1st poppet.

3. If 1st poppet sealed, hold 1st poppet open and check 2nd poppet 1 minute for leakage. If no leakage, the 2nd poppet is sealing.
4. If both check valves are sealing, replace in line or meter.
5. If either or both checks leak, obtain a seal repair kit from your authorized Mueller distributor. Mueller Co. suggests replacing all parts furnished in the kit. Then retest the valve for leakage for backpressure prior to replacing in line.

*Above 100 psig, the 1st poppet is difficult to push open with your finger. Tester may wish to remove valve from line for testing.



All parts of the Mueller Dual Check Valve are corrosion resistant for many years of dependable service. As of January 4, 2014, body and end-cap are made from low lead brass that complies with AWWA C800. Dual poppet assemblies are made of acetal plastic material with natural rubber gaskets, and springs are stainless steel.

All internal parts of Mueller Dual Check Valves are replaceable without removing the valve from the line. The O-ring sealed end-cap provides full, easy access to working parts. Each poppet valve, with attached gasket and spring, can be replaced individually if desired. In addition, both in-line and angle styles use the same replacement parts for a given size, which simplifies parts inventory.

DC-1 Body:

Order by catalog number & size as shown below in chart.


DC-2 Cap

DC-3 Sealing Kit:

For all 3/4" size Dual Check Valves and includes:

- A. 1st Poppet & Gasket
- B. 2nd Poppet & Gasket
- C. O-ring - 2nd Poppet I.D. Seal
- D. Spring - 1st Check
- E. Spring - 2nd Check
- F. O-ring - Cap Seal

DC-4 Rubber Meter Washer

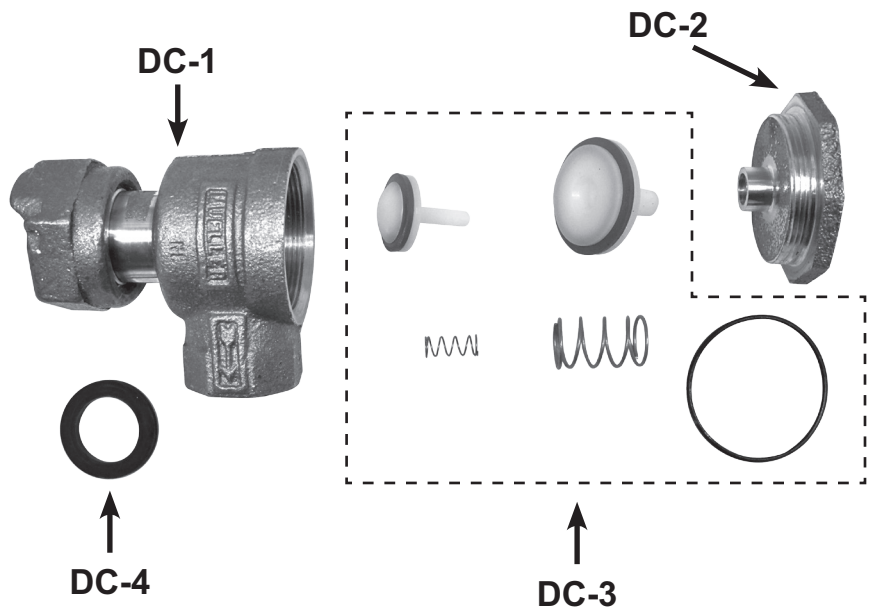

MAIN OFFICE – Chattanooga, TN (800) 423-1323
CANADA – Mueller Canada, Inc.
Milton, Ontario (905) 878-0541
www.muellercompany.com