

INFINEX™ ADAPTERS

Installation Instructions

The Infinex[™] line of adapters simplifies cut-in repair installations and is designed to be assembled on CTS size compression threads after the compression nut is removed. These adapters have an integral EPDM rubber gasket that seals to the face of the beveled gasket surface.

After the adapter is connected to a valve or fitting using the torque procedures below, use the assembly to mark the section of pipe to be cut out.

TORQUE PROCEDURES

- 1. Hold the extended valve assembly next to the old valve to be removed.
- 2. Mark the pipe at the line on the Infinex adapter body that says, "pipe end".
- 3. Mark the other side of the pipe at the valve wrench flats.
- 4. Cut out the valve, fitting, and short pipe sections at the two (2) mark points.
- 5. Slip the new valve or fitting and extender into the gap, feeding the extender which has a deep end onto the first pipe, then slip the assembly back over the second pipe until it hits the internal pipe stop inside the valve/fitting end.
- 6. Torque the compression nuts per manufacturer's instructions.

INCREASERS*

A new outlet compression nut is shipped with the Infinex adapter.

EXTENDERS*

- 1. The compression nut should be removed from the valve or fitting to be extended.
- 2. Thread the Infinex adapter onto the threads of the valve or fitting to be extended.
- 3. Attach the compression nut that was removed to the end of the Infinex adapter.
- 4. For 110 compression style fittings that have a stop shoulder, tighten the Infinex fitting until the end touches the machined surface of the valve or fitting.

WARNING: DO NOT use a compressible medium, such as air, to check for water tightness. Doing so could result in an explosive failure causing serious bodily injury or property damage. Never reuse a compression nut without first replacing the gasket and grip ring components.

WARNING: DO NOT use if threads on the Infinex Adapter or valve/fitting threads are damaged. Damaged threads may result in a connection failure that could cause bodily injury and/or property damage.

For more information about Mueller or to view our full line of water products, please visit www.muellerwp.com or call Mueller customer service at 1.800.423.1323.

Mueller refers to one or more of Mueller Water Products, Inc. (MWP), a Delaware corporation, and its subsidiaries. MWP and each of its subsidiaries are legally separate and independent entities when providing products and services. MWP does not provide products or services to third parties. MWP and each of its subsidiaries are liable only for their own acts and omissions and not those of each other. Mueller brands include Mueller®, Echologics®, Hydro Gate®, Hydro-Guard®, HYMAX®, i2O®, Jones®, Krausz® Mi.Net®, Milliken® Pratt®, Pratt Industrial®, Sentryx®, Singer®, and U.S. Pipe Valve & Hydrant. Please see muellerwp.com/brands to learn more.

© 2022 Mueller Co., LLC. All Rights Reserved. The trademarks, logos and service marks displayed in this document are the property of Mueller Co., LLC., its affiliates or other third parties. Products marked with a section symbol (§) are subject to patents or patent applications. For details, visit www.mwppat.com. These products are intended for use in potable water applications. Please contact your Mueller Sales or Customer Service Representative concerning any other application(s).

^{*}Refer to specific nut installation instructions shipped with valve or fitting that is being adapted in addition to the Infinex adapter installation instructions found above.

^{*}Pressure test for leakage before backfilling in accordance with ASTM D2774.