# **Remote Pressure Monitoring - Quick Start Guide**


Valve Box Installation Instructions

# HYDRO-GUARD



#### Verify Cell Coverage at Installation Site.

Place cell phone of same carrier (Verizon or AT&T) at the planned installation location, and verify the signal quality. Indicator must have a minimum of two (2) bars.

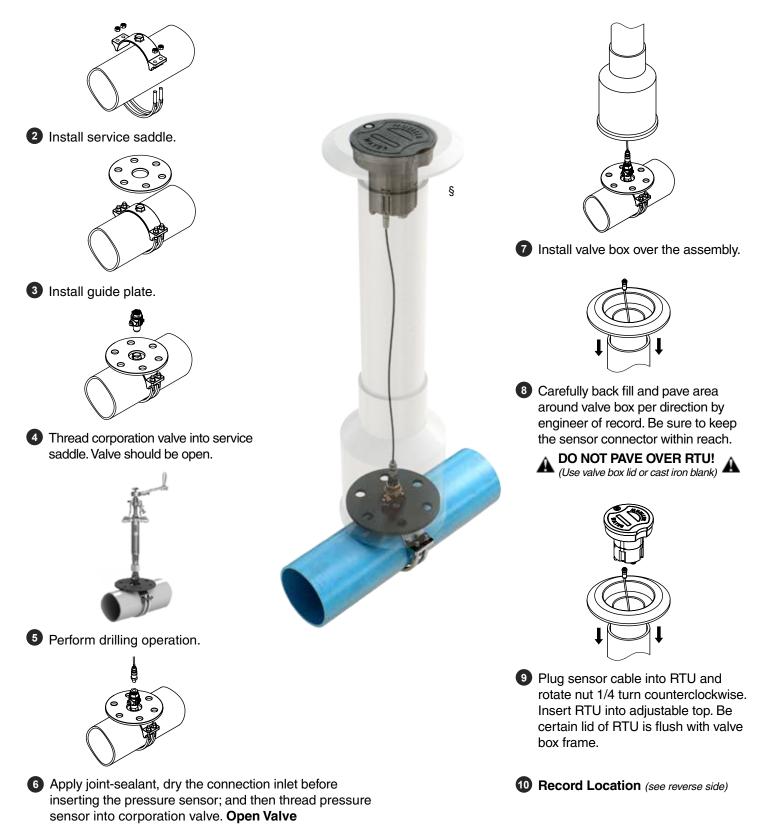

### Important: Please complete form on reverse and return to administrator after installation

## **Bracket Installation Instructions**



#### Verify Cell Coverage at Installation Site.

 Vering Cen Correction
Place cell phone of same carrier (Verizon or AT&T) at the planned
the signal quality. Indicator must have a minimum of two (2) bars. Place cell phone of same carrier (Verizon or AT&T) at the planned installation location, and verify

